



Zhejiang Quen Technology Co.,Ltd

—— The Founder of Global Top-grade Shoe Cover Machine



>About us



The **Unique Manufacturer** of Intelligent Thermo Shrinkable **Shoe Cover Machine** - Zhejiang Quen Technology Co.,Ltd, located in Hangzhou City, Zhejiang Province, China.

The main product of the company - Intelligent Thermo Shrinkable Shoe Cover Machine is an automatic professional appliance to cover film under the shoe by utilizing the thermal shrinkable principle. It aims to achieve anti-bacteria and keeping floor clean, without stooping down and wearing shoe cover by hand.

"Quen" Intelligent Thermo Shrinkable Shoe Cover Machine has been developed since 2003. After thousands of times experiment and improvement, it takes the lead in entering into European market with skilled technology in 2006, and has passed CE certification.

It is widely used in places where is with higher cleanliness requirement like hospital, clinic, labortory, dust-free workshop, food factory, hotel, museum, beauty salon, gym, model house and so on.

We welcome customers, business associations and friends from all parts of the world to contact us and seek cooperation.



Quen

> The Benefit of Automatic Shoe Cover Machine

Automatic Shoe Cover Machine

To provide a clean environment !



Free from removing shoes while entering room



By wearing shoe cover can keep floor clean



Free from bowing to wear shoe cover by hand, especially to the elderly people



Avoid cross-infection via slippers



Enhance enterprise image, enjoy clean working environment




Working Principle

This Automatic Shoe Cover Machine uses the principle that **Thermal Shrinkable film** will shrink at proper temperature.


It can **automatically** output and cut the PVC film and provide hot air .

This machine only takes about **three seconds** to make PVC film into shoe cover and wraps people's shoes.

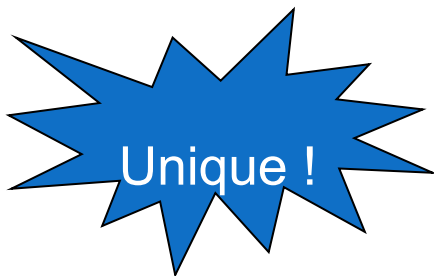

Quen

>How it works ?

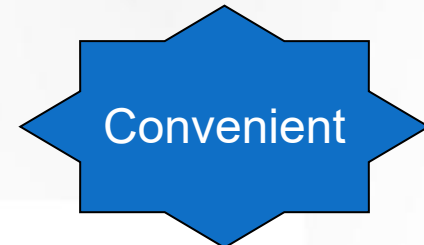

Step your foot on the position
with "PRESS"

First Step



Press the footboard till bottom
wait for 2-3 seconds

Second Step



Lift up foot

Third Step

Quen

›Product Feature



Global First, Patent Design

Unique Manufacturer

Quen

›Product Details




*It has wheels
easy to move*



Quen

Product Details

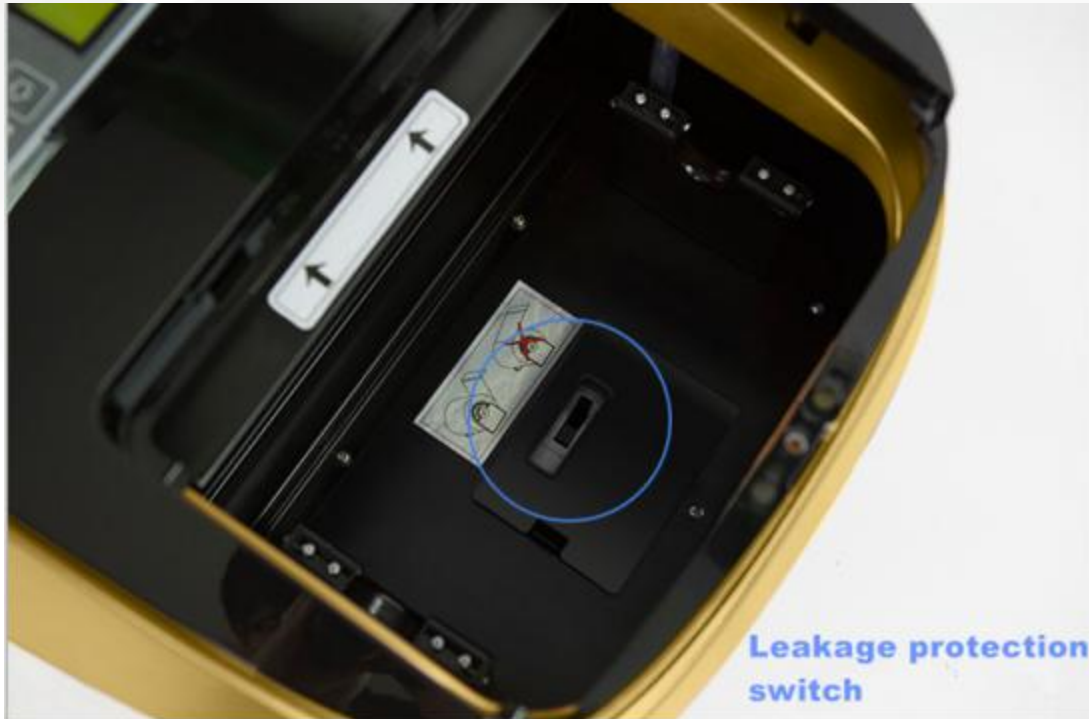

***With Leakage
protection switch
Ensure safe use***

Quen

Product Details



From the LCD Display

- ① *It shows the remaining quantity of shoe cover*
- ② *It shows the room temperature and time*
- ③ *It can adjust the temperature level of the machine*
- ④ *It can adjust the length of PVC film*
- ⑤ *It can set up the working time ,then machine can turn on/off automatically*

Quen

Product Specification



Silver color



Gold color



Copper brown

Model No.	XT-46C
Capacity of shoe cover	1000pcs
Design Useful Life	300,000 times
Operating Voltage	220V $\pm 5\%$ or 110V $\pm 5\%$
Maximum Power	1300W
Standby Power	75W
Preheating Time	$\approx 120s$
Film-delivering Time	3s
Film Shaping Time	3s
Material of Outer Case	ABS
Dimension of Machine	78 x 44 x 32 cm
Dimension of Carton	87 x 50 x 40 cm
Net Weight	About 21kg
Gross Weight	About 27kg

➤ Why choose Quen Thermo Shrinkable shoe cover machine

Advantage	
1. Economical	The cost of our PVC film is economical than traditional shoe cover,the thickness is about 28 micron, it is more durable
2. Large capacity	One roll film can be made into 500 pairs shoe cover, for other shoe cover machine, the shoe cover capacity is only 50-100 pairs.
3. Long design life	The design life is 300,000 Times
4. Convenient	It only takes about 30s to replace the film roll, then it can use 1000 times consecutively.
5. Comfortable	It is easy to use and comfortable to wear.
6. Environment-friendly	The PVC film has passed the RoHS certificate, it is environment-friendly

Applicable Site for Shoe Cover Machine:

1. Medical system:	Dental Clinic, Laboratory, Medical Center, Hospital (operating room,CT room, X-ray room, B ultra room,ICU room, VIP room, Blood center), etc
2. Factory:	Food factory, Pharmaceutical factory, Cosmetics factory,Electric factory, Chemical industry, Clean room, office, Data center, etc
3. Public place :	High grade club, Hotel, Museum, Top grade meeting room, Spa center, Fitness center, etc
4. Real Estate:	Model house, High grade residence, etc
5. Education System:	Kindergarten, School, Computer room, Research and teaching, etc



For home、real estate



For meeting room



For clean room



For hotel、club



For laboratory

